


Product Overview - Removal Comparison

Polish Slurry	CR-39 1.498	Poly 1.586	ELYO 1.55	Silor 1.60	Silor 1.67
Phoenix (774)	194	78	415	190	229
Image (735)	252	66	362	174	176
Focus 999 (737)	199	60	295	147	145
Polilens Plus (714Y)	209	73	319	158	154
Polispeed (763)	291	75	496	220	273
Praxair® HA-1	128	55	227	89	117
Fujimi 203H	86	23	148	62	84
Fujimi 207A	139	44	135	106	117

Polishing parameters: All lenses tested on Loh Toro X2 polisher, 6 minute cycle, premium pads

Product Overview - Removal Comparison


CR-39 Stock Removal Comparison

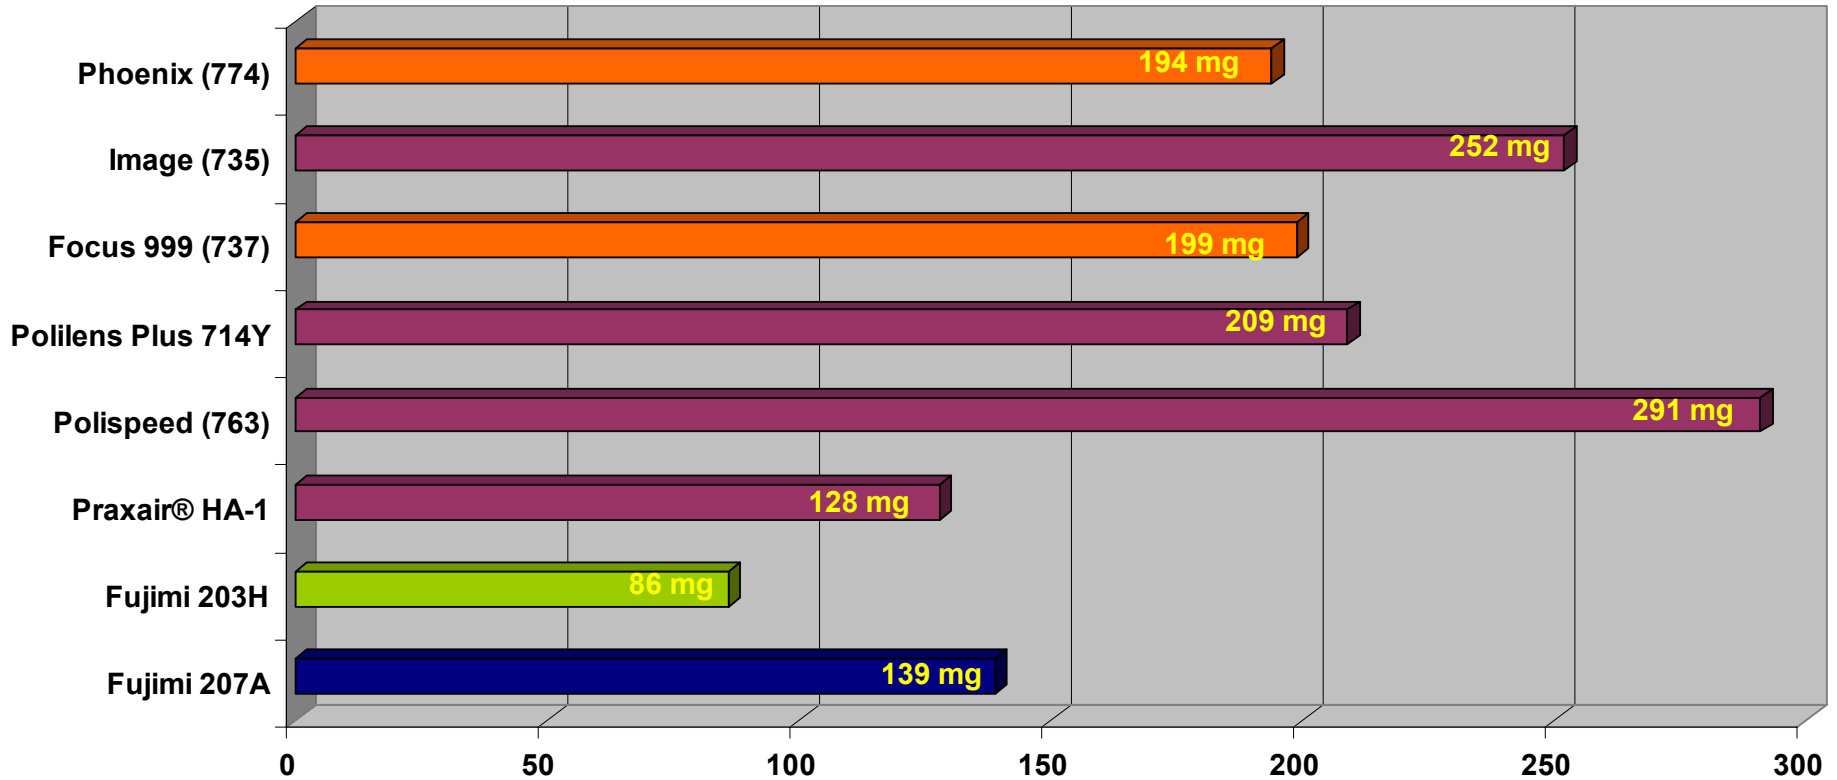

Polishing parameters: All lenses tested on Loh Toro X2 polisher, 6 minute cycle, premium pads

Product Overview - Removal Comparison


Polycarbonate Stock Removal Comparison

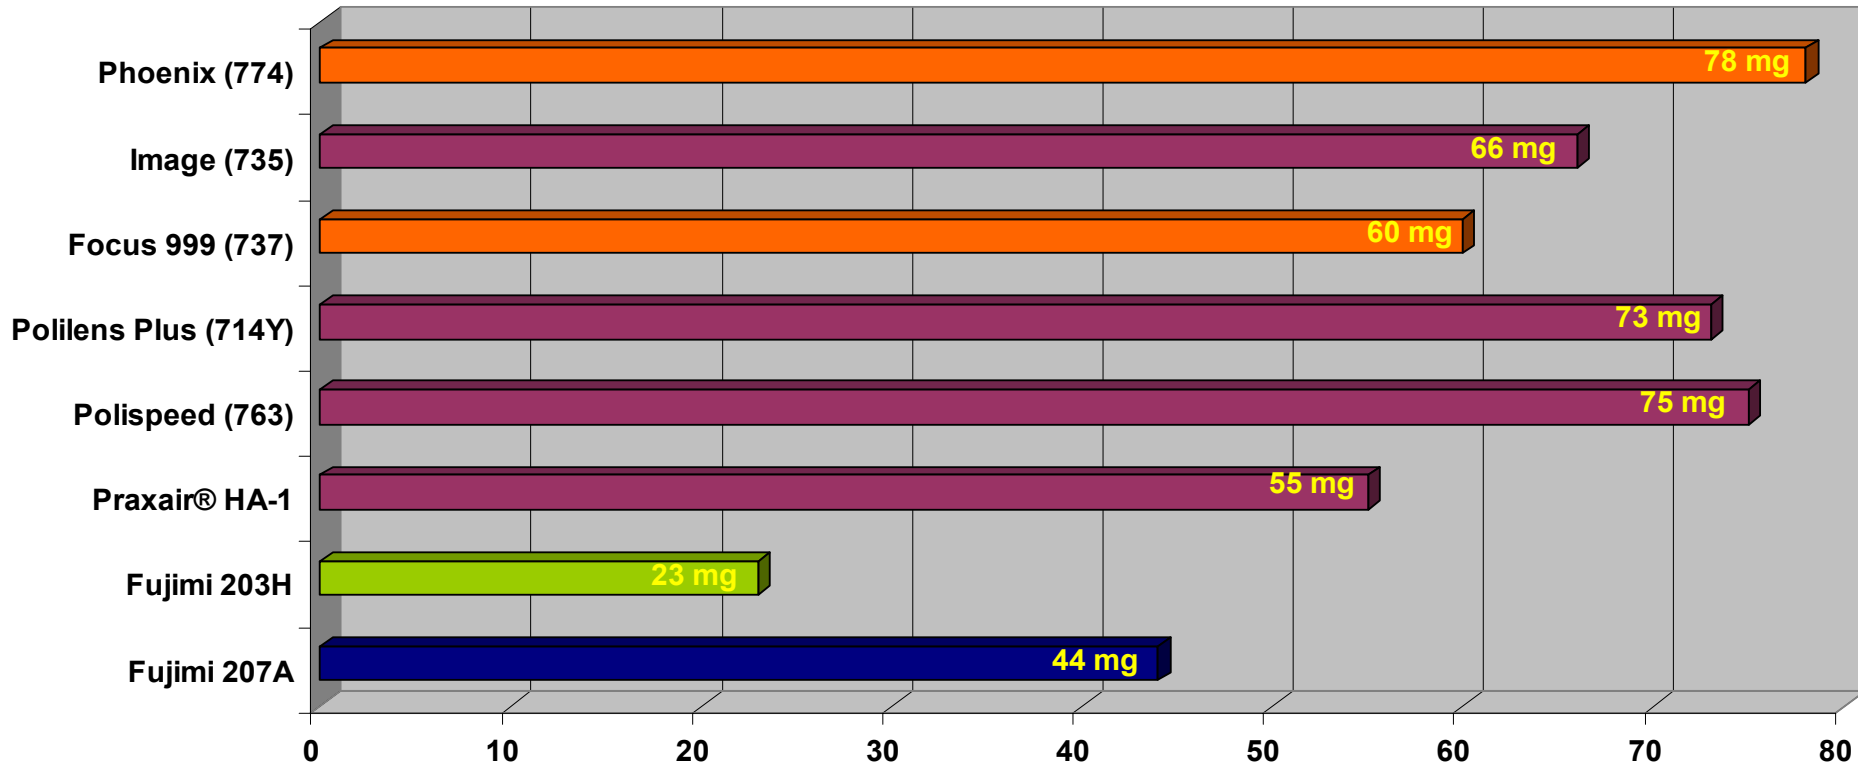

Polishing parameters: All lenses tested on Loh Toro X2 polisher, 6 minute cycle, premium pads

Product Overview - Removal Comparison

Mid&Hi-Index

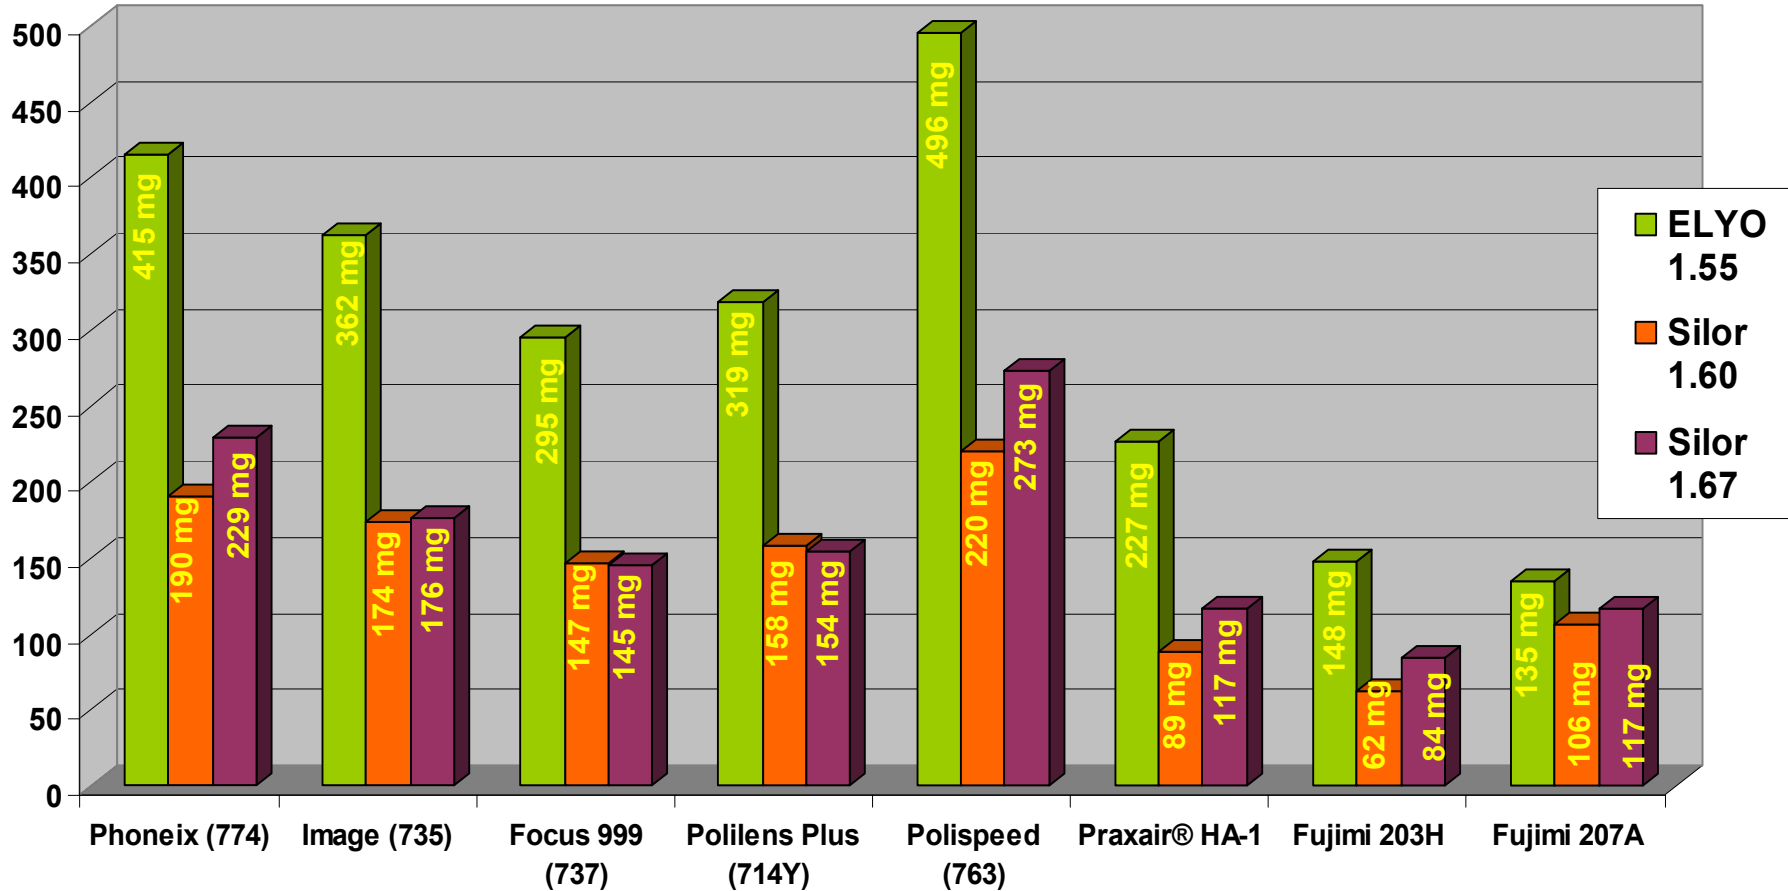

Polishing parameters: All lenses tested on Loh Toro X2 polisher, 6 minute cycle, premium pads



ELECTRONIC MATERIAL SYSTEMS

1789 Transelco Drive, Penn Yan, NY 14527

Phone: 315-536-3357 Fax: 315-531-8397

VBulkeley 5/4/2005

Product Overview – Surface Quality Comparison

